





WIRELESS MICROPHONE SYSTEM INSTRUCTION

SYSTEM PARTS

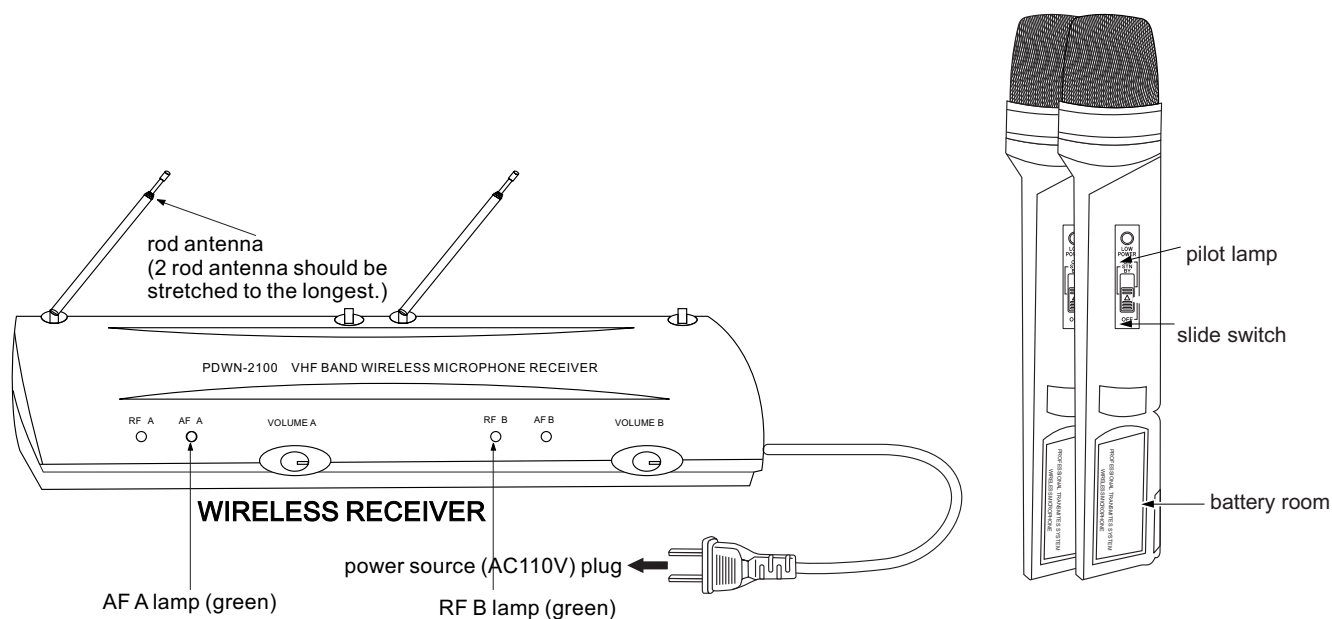

HOW TO INSERT BATTERY

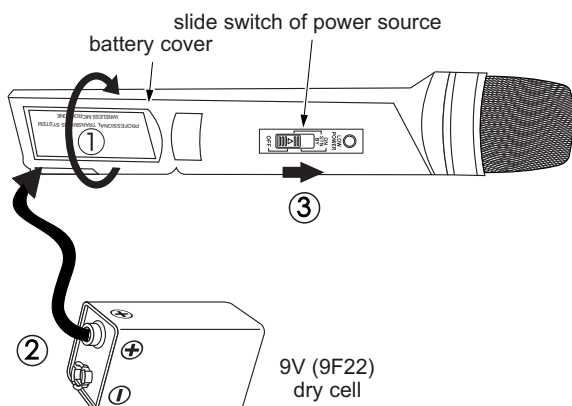


- ☐ Turn round the battery cover to open.
- ☐ Put in the battery according to the direction seal. The battery should be 9V and please make sure the correct direction.
- ☐ Put the slide switch to "ON" to check the power source, if the pilot lamp is bright, the microphone is ready.

Point

According to different situation, the battery can use about 10 hours.

HOW TO USE THE WIRELESS MIC

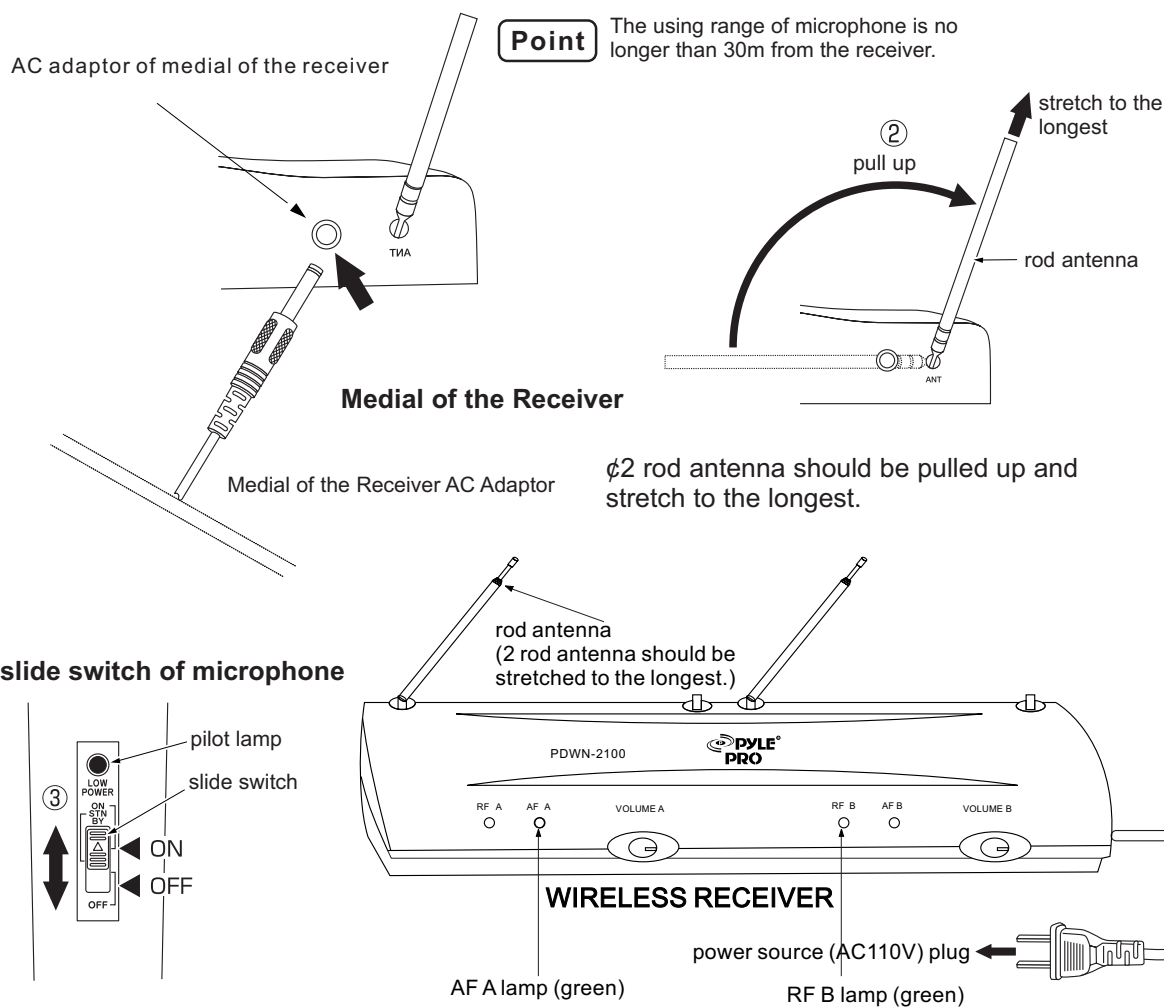

- ϕ Plug in the power source of the wireless receiver. (power lamp "red")
- ϕ Slide the slide switch of the microphone to ON, and plug in the power source.
- ϕ Please regulate the volume of the karaoke system (speaker or amplifier etc.)

ATTENTION

- If the mic lamp of the receiver or the pilot lamp of the microphone does not bright, probably the direction of battery is not correct, please make sure again.
- If there is any hosing when using, put down the volume of the karaoke system (speaker or amplifier etc). In addition, put the microphone away from the karaoke system, do not make the microphone face to the speaker.
- When getting dirty, please use piece of soft cloth to clean softly. If very serious, dilute some neutral lotion to wipe. Intensive lotion such as alcohol. thinner ect, may do harm to this product, please do not use on it.